

Using the CIOKS DC10 to power a maximum of three Eventide Factor Series Stompboxes



Connect only with the green tipped to single black tipped power cables. (Type 4 - green with 5.5/2.5mm center positive DC-plug.)

DIP Switches:

To power one or two Eventide Stompboxes the DIP Switches on the back of the DC10 can remain at their default settings.

However, to power three Eventide Stompboxes Make sure the DIP Switches are set to engage the Merge feature of Outlets 5+6, and to set Outlet 6 to 12V like this:



1 2 3 4 5 6
ON ON

To power one Eventide stompbox, connect to the DC10's Outlet 10:



To power a second Eventide stompbox, connect to the DC10's Outlet 8:



To power a third Eventide Stompbox, connect to the DC10's Outlet 6:



For support contact support@cioks.com